

SECTION 1 FRONT AXLE

- 1.01 FRONT AXLE ASSY
- 1.02 FRONT AXLE STEERING ASSY

SECTION 2 REAR AXLES

- 2.01 REAR AXLE ASSY
- 2.01 HOUSING GROUP
- 2.03 DRIVE GROUP
- 2.06 TRAILING AXLE LH & RH
- 2.07 STEERABLE TAG

SECTION 3 BODY

- 3.01 DASH BOARD
- 3.02 MODESTY PANELS
- 3.03 DRIVERS GRAB RAIL
- 3.04 STEP WELL
- 3.05 SUN VISOR – BLINDS
- 3.06 REAR VIEW MIRROR – INTERIOR
- 3.07 AIR VENTILATION SYSTEM
- 3.08 LUGGAGE RACK- PARCEL – SERVICE MODULE
- 3.09 CURTAINS
- 3.10 DOOR CONTROL
- 3.11 PASSENGER SEATS
- DRIVER'S SEAT
- 3.12
- 3.13 SEAT CUSHIONS & PADS
- 3.14 DRIVER'S WINDOW
- 3.15 MISC INTERIOR – TRASH CHUTE
- 3.16 INTERIOR PANELS
- 3.17 HEATER DUCT
- 3.18 FLOOR – PLYWOOD
- 3.20 MOLDINGS
- 3.21 BUMPERS
- 3.22 REAR VIEW MIRROR – EXTERIOR
- 3.24 TOW HOOKS
- 3.25 DESTINATION SIGN
- 3.27 SASH ASSEMBLY
- 3.29 BAGGAGE DOORS
- 3.30 BATTERY DOOR
- 3.31 SERVICE DOORS – ROOF HATCH
- 3.32 ENTRANCE DOOR
- 3.33 MISCELLANEOUS EXTERIOR
- 3.34 WIPER-WASHER – INSTALLATION
- 3.35 FENDERS – EXTERIOR PANELS
- UNDER BODY PANELS
- 3.36
- 3.37 BLOWER COMPT PANELS
- 3.39 FRAME ASSY
- 3.40 HEAD LAMP TRUSS
- 3.41 01-TRUSS - FRONT OF FRONT WHEEL
- 3.42 02-TRUSS - REAR OF FRONT WHEEL
- 3.43 03-TRUSS - REAR OF FUEL TANK
- 3.44 04-TRUSS - BAGGAGE COMPT TRUSS
- 3.45 05-TRUSS - FRONT OF REAR WHEEL
- 3.46 06-TRUSS – REAR OF REAR WHEEL
- 3.47 07-TRUSS – FRONT OF ENGINE COMPT

SECTION 3 BODY

- 3.48 MOTOR FLOOR – LH
- 3.50 MOTOR FLOOR – RH
- 3.51 TIRE FLOOR
- 3.52 FRONT FLOOR
- 3.53 FRONT BOGIE
- 3.54 MAIN FLOOR
- 3.56 REAR BOGIE
- 3.57 BAGGAGE FLOOR
- 3.59 LOWER FRAME
- 3.60 WHEEL HOUSING
- 3.61 BATTERY CARRIER & COMPT
- 3.75 UPPER FRAME - FRONT SECTION
- 3.76 UPPER FRAME - CENTER SECTION
- 3.77 UPPER FRAME - REAR SECTION

SECTION 4 BRAKES & AIR SYSTEM

- 4.01 FRONT AIR BRAKES
- 4.02 FRONT AIR BRAKES DIAPHRAGM
- 4.03 FRONT AIR BRAKE SLACK ADJUSTER
- 4.04 REAR AIR BRAKE
- 4.05 REAR AIR BRAKE DIAPHRAGM
- 4.06 REAR AIR BRAKE SLACK ADJUSTER
- 4.07 COMPRESSOR
- 4.08 GOVERNOR - AIR COMPRESSOR
- 4.09 FILTER, COMPRESSOR, DISCHARGE
- 4.10 ALCOHOL EVAPORATOR
- 4.11 BRAKE RELAY VALVE
- 4.12 QUICK RELEASE VALVE
- 4.13 STOP LIGHT SWITCH
- 4.14 LOW AIR PRESSURE INDICATOR SWITCH
- 4.15 BRAKE APPLICATION VALVE
- 4.16 BRAKE LIMITING VALVE
- 4.17 SAFETY VALVE
- 4.19 AIR RESERVOIRS
- 4.20 AIR LINES
- 4.21 AIR PELLO VALVE
- 4.22 MISC VALVES
- 4.23 AIR DOOR CONTROL
- 4.24 AIR HORNS AND FOOT VALVE
- 4.25 PARKING BRAKE
- 4.26 PARKING BRAKE HAND LEVER
- 4.27 PARKING BRAKE LINKAGE & TWO ROD CONTROL
- 4.28 PUSH PULL VALVE
- 4.29 INVERSION VALVE

SECTION 5 CLUTCH

- 5.01 CLUTCH ASSY
- 5.01 CLUTCH COVER PLATE
- 5.03 CLUTCH DRIVEN DISC
- 5.04 CLUTCH PILOT BEARING
- 5.05 CLUTCH LINKAGE

SECTION 6 COOLING

- 6.01 RADIATOR

SECTION 6 COOLING

- 6.02 RADIATOR SHUTTERS
- 6.03 WATER PUMP & COVER (ON ENGINE)
- 6.04 WATER DISTRIBUTION (ON ENGINE)
- 6.05 BLOWER'S & DAMPERS (SQUIRREL CAGE)
- 6.06 BLOWER DRIVE
- 6.07 FAN SHROUD & FAN BRACKET
- 6.08 WATER LINES & FILTER
- 6.09 SHUTTERS
 - 6.1 AIR CONTROLS & EQUIPMENT
- 6.11 FAN DRIVE / FAN CLUTCH
- 6.12 RECIRCULATING AIR HEATING
- 6.13 RECIRCULATING AIR SHUTTER
- 6.14 SURGE TANKS

SECTION 7 ELECTRICAL

- 7.01 STARTER MOTOR
- 7.02 DISTRIBUTOR
- 7.03 GENERATOR & RECTIFIER
- 7.04 REGULATOR
- 7.05 ELECTRIC HORNS & RELAYS
- 7.05 IGNITION SWITCH
- 7.06 SOLENOID SWITCH
- 7.07 LIGHT ASSEMBLIES
- 7.08 MISC ELECTRIC ITEMS
- 7.09 BATTERY & HARNESS
- 7.10 BULB SIZES & LOCATIONS
- 7.12 HARNESS
- 7.13 ELECTRICAL PANEL ASSEMBLIES - J BOY
- 7.14 PASSENGER HEATER ASSEMBLIES
- 7.15 DRIVER'S HEATER ASSEMBLIES (SEE 16.14)
- 7.16 VENTILATION FAN ASSEMBLIES
- 7.17 DEFROST FANS
- 7.20 ENTERTAINMENT SYSTEM

SECTION 8 ENGINE

- 8.01 ENGINE ASSY
- 8.02 CYLINDER & CRANKCASE
- 8.03 CYLINDER HEAD
- 8.04 CRANKSHAFT GEAR & PULLEY
- 8.05 CONNECTING RODS & BEARINGS
- 8.06 PISTON PINS & RINGS
- 8.07 CAMSHAFT GEAR
- 8.08 TIMING COVER, VALVES, SPRINGS & ROCKER ARMS
- 8.09 LIFT RODS & SIDE COVERS
- 8.10 VALVE COVERS
- 8.11 OIL PAN
- 8.12 OIL PUMP
- 8.13 OIL CONTROL
- 8.14 OIL FILTER
- 8.15 OIL COOLER
- 8.16 CRANKCASE VENTILATION
- 8.17 FLYWHEEL & HOUSING
- 8.18 ENGINE MOUNTING PARTS

SECTION 8 ENGINE

- 8.19 MANIFOLDS
- 8.20 MUFFLER
- 8.21 MOTOR PAN
- 8.22 GOVERNOR
- 8.23 IGNITION
- 8.24 GENERATOR MOUNTING
- 8.25 ELECTRIC WIRING
- 8.26 AIR COMPRESSOR MOUNTING
- 8.27 BELTS
- 8.26 GAUGES & SENDING UNITS
- 8.29 HEAT SHIELDS
- 8.30 ENGINE LIFTERS
- 8.31 POWER STEERING PUMP & DRIVE
- 8.32 ENGINE BRAKE
- 8.33 HYDRAULIC & ACCESSORY DRIVE
- 8.50 COUPLING FOR AIR COMPRESSOR
- 8.51 ACCESSORY DRIVE GEAR BOX MOUNT PARTS
- 8.52 ACCESSORY BELT DRIVE (INC. ENG., CRANKSHAFT, PULLEY)
- 8.54 ACCESSORY HYDRAULIC PUMP
- 8.57 HYDRAULIC MOTORS
- 8.62 HYDRAULIC ACCESSORY DRIVE LINES & FITTINGS
- HYDRAULIC ACCESSORY DRIVE CONTROLS
- 8.63 VALVES & SWITCHES

SECTION 9 FUEL SYSTEM

- 9.02 CHOKE VALVE
- 9.03 AIR CLEANER - AIR FILTER
- 9.04 ACCELERATOR LINKAGE
- 9.05 FUEL LINES & VALVES
- 9.06 FUEL TANK & MOUNTINGS
- 9.07 FUEL FILTERS

SECTION 10 LUBRICATIONS

- 10.01 OIL RESERVE TANK
- 10.02 LINES & FITTINGS

SECTION 11 STEERING

- 11.01 STEERING GEAR
- 11.02 STEERING COLUMN AND WHEEL
- 11.03 STEERING GEAR MOUNTING
- 11.04 DRAG LINK
- 11.05 STEER GEOMETRY
- 11.07 POWER STEERING
- 11.08 LINES & FITTINGS
- 11.09 PUMPS POWER STEERING

SECTION 12 SUSPENSION

- 12.03 AIR SUSPENSION REAR
- 12.04 REAR TRAILING WHEEL SUSPENSION
- 12.05 SHOCK ABSORBERS AND LINKS
- 12.06 LEVELING VALVE - FRONT & REAR
- 12.07 AIR FILTER WITH CHECK VALVE

SECTION 13 TRANSMISSION

- 13.01 TRANSMISSION ASSY
- 13.02 TRANSMISSION AND PARTS BEARINGS
- 13.03 BEARINGS

SECTION 13 TRANSMISSION

- 13.04 REMOTE CONTROL
- 13.05 SPEEDOMETER DRIVE PARTS
- 13.06 CLUTCH RELEASE MECHANISM
- 13.07 REMOTE GEAR SHIFT & LINKAGE
- 13.08 COMPANION YOKE
- 13.09 CONTROL ROD BEARINGS & BRACKETS
- 13.10 TRANSMISSION OIL FILTER
- 13.11 OIL COOLER

SECTION 14 PROPELLER SHAFT /DRIVE SHAFT

- 14.01 DRIVE SHAFT/PROPELLER SHAFT/U JOINTS

SECTION 15 WHEELS

- 15.01 SMART TIRE
- 15.02 FRONT HUB & DRUM ASSY
- 15.03 REAR HUB & DRUM ASSY
- 15.04 DUST SHIELDS
- 15.05 REAR TRAILING WHEEL HUBS & DRUMS

SECTION 16 AIR CONDITING

- 16.01 MISCELLANEOUS INSTALLATION LAYOUT
- 16.01 CONDENSER
- 16.02 COMPRESSOR & MOUNTING
- 16.02 MAIN EVAPORATOR
- 16.03 DRIVE
- 16.03 COMPRESSOR
- 16.04 CONDENSER
- 16.04 DRIVERS DISPLAY
- 16.05 RECEIVER
- 16.05 MAIN CONTROLLER
- 16.06 EVAPORATOR
- 16.06 AUX HEATER
- 16.07 HEARTER & WATER VALVE
- 16.07 PACREL RACK
- 16.08 EVAPORATOR & HEATER FAN MOTOR & DUCTS
- 16.08 DRIVERS EVAPORATOR
- 16.09 CONDENSER FAN & MOTOR
- 16.10 FILTER & HEAT CONTROL
- 16.11 LINES & FITTINGS
- 16.12 A/C COMPARTMENT
- 16.14 DRIVER'S HEATER, DEFROSTER & A/C
- 16.15 AUXILLARY A/C

SECTION 17 LAVATORY

- 17.01 MISC. NAME PLATES, DISPENSERS, ETC.
- 17.02 TANKS & MOUNTINGS
- 17.03 DOMPARTMENT PANELS
- 17.04 EXHAUST FAN & MOTOR
- 17.05 LINES & FITTINGS

SECTUIB 19 STANDARD HARDWARE

- 19.01 SCREWS & BOLTS
- 19.02 WASHERS
- 19.03 NUTS
- 19.04 CLIPS & CLAMPS
- 19.05 MISCELLANEOUS

SECTUIB 19 STANDARD HARDWARE

- 19.06 KEYS
- 19.07 PINS
- 19.08 PLUGS
- 19.09 RINGS
- 19.10 FITTINGS (TUBE & PIPE)
- 19.11 ELECTRICAL
- 19.12 GROMMETS
- 19.13 RIVETS

SECTUIB 22 WHEEL CHAIR LIFT

- 22.01 LIFT
- 22.02 PLATFORM & RAMP
- 22.03 HYDRAULICS
- 22.04 PLATFORM LOCK